

*Magpie* do more



## Start-up Guide



[www.uni.com.tw](http://www.uni.com.tw)

---

## Contents

Getting Started .....	2
Step 1: Checking articles in the package .....	2
Step 2: Installing the battery .....	2
Step 3: Pulling out the stylus .....	3
Step 4: Changing operating methods.....	3
Part name and function .....	4
Functions summarization.....	6
Basic operations .....	9
Turning the PDA on and off .....	9
Operating methods.....	10
Home Screen .....	11
Using External Memory Card .....	16
Using Help.....	16

---


## **Getting Started**

### Step 1: Checking articles in the package

- |     |                  |     |   |
|-----|------------------|-----|---|
| 1.  | PDA body         | ... | 1 |
| 2.  | Stylus           | ... | 1 |
| 3.  | Charger          | ... | 1 |
| 4.  | CD-ROM           | ... | 1 |
| 5.  | USB Cable        | ... | 1 |
| 6.  | Power            | ... | 1 |
| 7.  | Start-up Guide   | ... | 1 |
| 8.  | Operation Manual | ... | 1 |
| 9.  | Sling            | ... | 1 |
| 10. | Earphone         | ... | 1 |

### Step 2: Installing the battery

Insert the battery into the battery compartment along the battery slot.

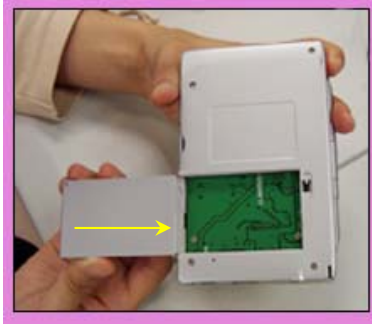

### Step 3: Pulling out the stylus

Pull the stylus out from the stylus slot. The stylus is used to operate the touch-sensitive screen. To prevent the screen becoming scratched, you should only use the stylus that is provided with the Magpie PDA. Pull the stylus upwards from the stylus slot.



### Step 4: Changing operating methods

Different operating methods can be chosen by rotating the

upper cover of the PDA.



Carrying style



Opening style




Rotating style

## Part name and function




Opening picture

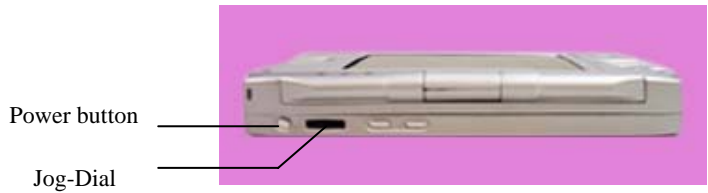

Left view



Front view

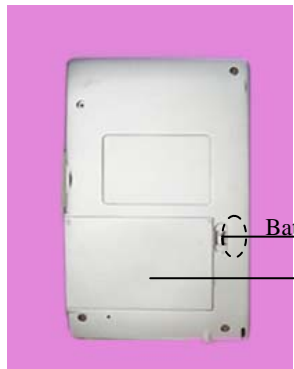

Back view



Top view















Bottom view

---




## Functions summarization

 Applications:




	Address Book	It allows you to manage contact information of friends, colleagues, relatives, etc.
	Calculator	It allows you to perform basic calculations.
	DVR	It helps you with real time recording.
	E-mail	It helps you with receiving or sending E-mails.
	Image Viewer	It helps you to view pictures.
	Media Player	It allows you to play MP3 files saved in the PDA or saved in an external device connected with the PDA.
	To Do List	It helps you to view a list of to do items and reminds you of what to be completed and when to be done.
	Scheduler	It helps you with arranging important schedules in your job and life. In addition, alarm clocks can be set to remind you of these schedules.
	Memo	It helps you to create some simple and editable documents.









	VoIP	It allows you to make VoIP phone calls by using the WiFi network.
	Painter	It helps you to draw some simple paintings, which will be saved in the PDA automatically. And you can send these paintings to others through E-mail.
	Timer	It helps you to count the time up or down.

 Games





	Para Shoot	Paratrooper game
	Oline	Bead connecting game
	Patience	Card game






 Settings

	Appearance	It allows you to customize the desktop and window properties.
	Date/Time	It helps you to set the current time and date.
	E-mail Setting	It helps you to set account for receiving or sending E-mails.

	FM Setting	It becomes more convenient for you to send or receive information by adjusting the FM.
	Launch Key	It helps you to reset the four AP shortcut keys as you want.
	Light & Power	It helps you to save the power.
	Recalibrate	It helps you to recalibrate the PDA screen's response to the stylus.
	Password	It helps you with setting passwords to protect your PDA from unauthorized use.
	Sound	It allows you to adjust the volume of startup and other status.
	VoIP Setting	It allows you to conduct related information setting on VoIP phone call.
	WLAN	It allows you to conduct related settings on network connections.

### Utilities

	Alarm	It reminds you of important things.
	Backups & Restore	It helps you to backup files on external devices and restore files back to the PDA form external devices.
	Recalibrate	It helps you to recalibrate the PDA screen's response to the stylus.
	Help	It offers on-line "Help" information of the PDA.

	Plug-in	It helps you to look over the PDA's external plug-in software and to decide whether start using this software or not.
	Rotation	It helps you to rotate the screen in the four different directions.
	Today	It will be started-up automatically everyday when you turn your PDA on for the first time. And it reminds you of the life and job schedule for that day.
	System Info.	It helps you to browse the system information.
	Software Manager	It helps you to install or uninstall software.

## **Basic operations**

### **Turning the PDA on and off**

#### **Press the Power button to turn the PDA on**

**Note:** The PDA can't be turned on when the battery level is low, and it can be turned on only after being connected with external power.

#### **Press and hold the Power button for several seconds to turn the PDA off**

#### **Turn off automatically**

To save the power, the PDA will turn off automatically if there isn't any

---

operation on it in a certain waiting time.

You can set the waiting time in the Light & Power Setting.

## Operating methods

### Using Stylus

Use the stylus to tap the touch panel to conduct relating operations.

### Pressing Hard Keys



DVR\Short Message



Wi-Fi on/off



Power on/off



VOIP



Address Book



Media Player



Home

### Using Jog-Dial

**The Jog-Dial speeds up operations of the Magpie PDA in many situations.**

⇧ UP: Upward choosing, volume and backlight adjusting, etc.

⇩ Down: Downward choosing, volume and backlight adjusting, etc.

○ Enter: Choosing, confirming, call answering, etc.

 
⇐ Left: Option switching, such as switching between name, telephone number and address in the operation of adding contacts.

⇒ Right: Cancel or return to the former UI.


## Home Screen

### Part names:

Press the Home Key to launch the Home Screen.

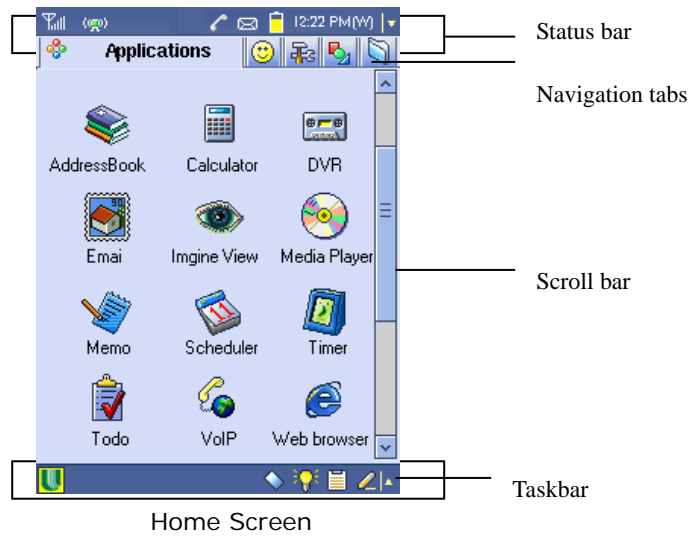


### Navigation tabs

Tap the Navigation tabs to switch between  applications,

 Games,  Settings,  Utilities and  Documents.

### Using the Status Bar

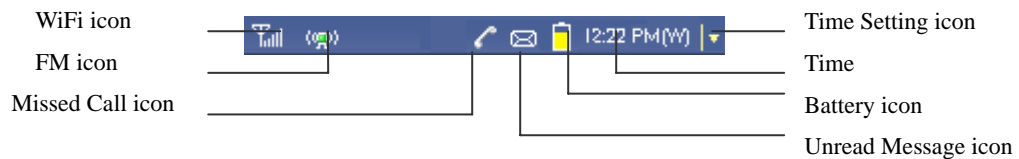


---

## **WiFi**

It shows the WiFi signal status.

1. Tap the WiFi icon to launch the following menu.
2. Choose the network status in this menu.

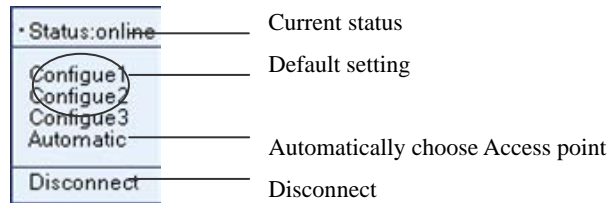

## **FM**

It shows the FM status.

1. Tap the FM icon to launch the following menu, which shows the current FM status.

Transmit: 98.4 MHz  
Receive: 104.6MHz

(If there is no FM signal, Transmit: not in use appears.)

2. Tap the menu to enter the FM Setting UI.

## **The Missed Call icon**

If there is one or more missed call, an icon will appear on the status bar. Tap this icon to enter the Missed Call UI.

## **The Unread Message icon**

If there is one or more unread message, an icon will appear on the status bar. Tap this icon to launch the following menu

---

2 unread Email(s)  
3 unread message(s)

Tap it to enter the E-mail—Inbox UI.  
Tap it to enter the VOIP—Message Reading UI.

### **The Battery icon**

Tap this icon to look over the battery's current status (High\Low\Being charged).


### **Time**

1. Tap the time on the status bar to switch between the local time and the world time.
2. Tap the arrow beside the time to enter the Time Setting UI.

Clock Set


Tap it to enter the Time Setting UI

### **Using the Taskbar**

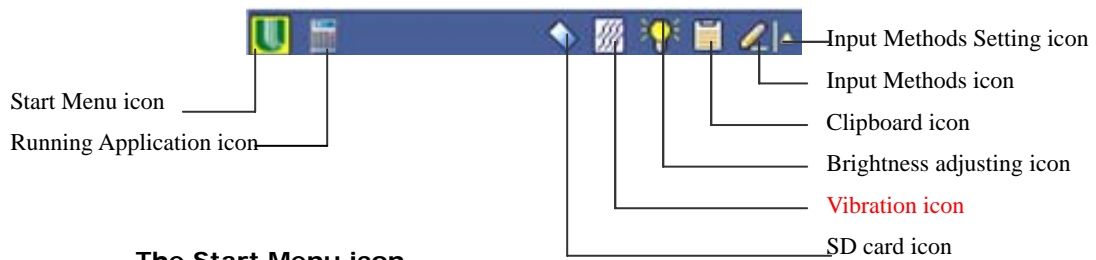

### **The Start Menu icon**

1. Tap it to launch the menu. This is another way of accessing applications.
2. Tap "Beaming" to launch another menu, choose items in it to run the relating program.

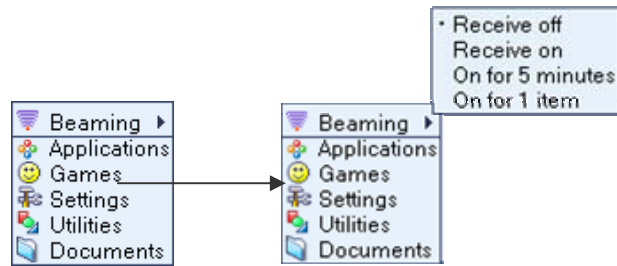

**The Running Application icon**

It represents the currently running application, and you can tap it to switch between different applications.

**The External Memory Card icon**

This icon will appear on the Taskbar when external memory card is inserted into the PDA.

For ejecting the external memory card, please tap this icon to launch a menu, and choose the relating operation on it.

**The Brightness Adjusting icon**

Tap this icon to launch the Brightness Adjusting UI.

Drag the slide cluster to adjust the backlight brightness.

Tap anywhere outside this UI to close it.

**The Clipboard icon**

**Cut**

1. Choose the characters you want to cut.
2. Tap the Clipboard icon to launch the following menu.



3. Choose "Cut".

**Copy**

1. Choose the characters you want to copy.
2. Tap the Clipboard icon to launch the menu, and choose "Copy".


**Paste**

1. Firstly copy the wanted characters.
2. Tap the Clipboard icon to launch the menu, and choose "Paste".
3. Move the cursor to the place that you want to paste the copied characters, and choose "Paste".

**The Input Methods Setting icon**

Tap this icon to launch the menu, choose the method you want in it. And the Input Methods icon beside it will change along with your choice.


**Keyboard Input Method:**

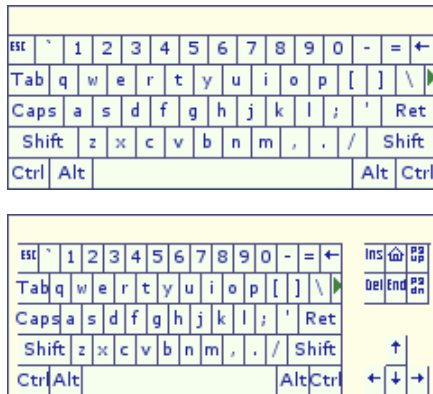

**Keyboard layout switch button**  
Tap the keyboard layout switch button (the right arrow) to switch the keyboard layout.

**Handwrite Input Method:**

Write down the characters you want on the screen by using the stylus.

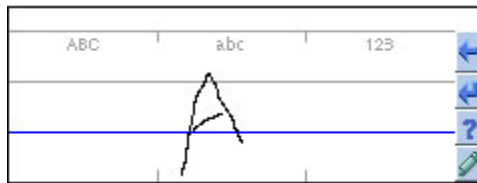

### Magpie Input Method:

1	2	3	4	5	6	7	8	9	0
q	w	e	r	t	y	u	i	o	p
a	s	d	f	g	h	j	k	l	←
z	x	c	v	b	n	m	.	.	Del
Symbol	Caps	Shift	Tab	Space	Return				

### Using External Memory Card

The external Memory Card can be checked by the PDA when it is inserted in, and the relating folder will be shown on the Files Home Screen.

#### Insert:

1. Firstly make sure that the PDA has been turned on.
2. Insert the memory card into the relating slot (pay attention to its direction) . Then, the relative icon will appear on the right side of the Taskbar, and the files index of the memory card will appear on the Files Home Screen as well.

#### Eject:

 
1. Tap the External Memory Card icon on the Taskbar to launch a menu.
2. Choose"Eject SD-card", the Memory Card icon will disappear immediately, and the files index will also disappear from the Files Home Screen at the same time.
3. Eject the memory card from its slot.

### Using Help

1. On the PDA Home Screen, tap the"Help Browser" icon in the


---

Utilities folder.

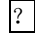

2. Or tap  on the top left corner of each AP to enter the Help Home UI.
3. Tap the blue characters to link to the relating detailed help information.

### **Adding a Bookmark**

For those often-browsed Help UI, you can add a Bookmark for them, which makes it convenient for you to enter these UI rapidly.

1. Enter the Help Browser UI for which you want to add a bookmark.
2. Tap , and tap "Add Bookmark" on the launched menu. Then, this UI will be added with a bookmark.

### **Deleting a Bookmark**

1. Tap  and choose the bookmark you want to delete on the launched menu to enter the relating Help Browser UI.
2. Tap  on the current Help Browser UI, and tap "Remove Bookmarks" on the launched menu, the selected bookmark will be deleted immediately.

## **Unication Consumer Web Site**

On [www.uni.com.tw](http://www.uni.com.tw) or [ww.uni-wlan.com](http://ww.uni-wlan.com), there is a Support Section where help and tips are only a few clicks away. Here you find the latest software updates, guides to use the products more efficiently.

---

### **FCC Statement**

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received including interference that may cause undesired operation.

### **Guidelines for Safe and Efficient Use**

Please read this information before using the product.

### **Recommendations**

- Always treat your product with care and keep it in a clean and dry place.
- Do not expose your product to liquid or moisture or humidity.
- Do not expose your product to extreme high or low temperatures.
- Do not expose your product to open flames or lit tobacco products.
- Do not drop, throw or try to bend the product.
- Do not attempt to disassemble the product.

---

[www.uni.com.tw](http://www.uni.com.tw)

[www.uni-wlan.com.tw](http://www.uni-wlan.com.tw)

**Headquarter:**

Unication Co., Ltd. Tel.:886-2-22999678 Fax: 886-2-22997998  
E-mail:salesenquiry@uni.com.tw Address: 5F., No.6, Wu-Kung 5Rd., Hsinchunag  
City, Taipei, Taiwan, R.O.C

**Unication USA:**

Dallas Branch: Tel.:1-972-424-8908 Fax: 1-214-245-4857  
E-mail:kirk@uni.com.tw

© 2005 Unication Co., Ltd. All rights reserved. This document is published by Unication Co., Ltd. The information contained in this document is the exclusive property of Unication Co., Ltd. It shall not be disclosed, distributed or reproduced in whole or in part without written permission of Unication Co., LTD. The information in this document may change without notice due to improvements to programs and/or equipment. Such changes will be incorporated into new editions.