



SINGLE UNIT CHARGER USER'S MANUAL

INDEX

1.	PREFACE	2
	1-1. IMPORTANT SAFETY INFORMATION	2
2.	PACKAGE CONTENT	
	2-1. STANDARD PACKAGE	
3.	3. CHARGER APPEARANCE	4
	3-1. FRONT VIEW	4
	3-2. REAR VIEW	
	3-3. LED INDICATOR	5
4.	FEATURE INTRODUCTION	6
	4-1. INSTALLATION	6
	4-2. CHARGING	7
	4-3. CHARGING SPARE BATTERY	8
	4-4. CHARGING EXTERNAL BLUETOOTH HEADSET	9
5.	SPECIFICATION	.10

1 PRFFACE



Unication thanks you for purchasing the G1 product. Before using the G1 charger, please read this manual and follow the instructions for correct charging and installation of the other accessories.

▶ 1-1. IMPORTANT SAFETY INFORMATION

This charger is used for the G1 pager only. Please be aware of the following important information for the safety on using the G1 charger.

- ⚠ Use your charger only with the original power adapter.
- ▲ Do not put a pager with a non-rechargeable battery inside into the charger.
 - (Using a rechargeable battery provided by Unication is recommended.)
- ▲ Keep your charger away from any dangerous environments with high temperature, high humidity, dust, chemicals and corrosive materials.
- ▲ Do not disassemble your charger or power adapter.
- ⚠ This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- △ IMPORTANT SAFETY INSTRUCTIONS SAVE THESE INSTRUCTIONS.

 △ DANGER TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK.
- CAREFULLY FOLLOW THESE INSTRUCTIONS.
- △ For connection to a supply not in U.S.A., use an attachment plug adapter
 of the proper configuration for the power outlet if needed.



2. PACKAGE CONTENT







➤ 2-1. STANDARD PACKAGE

The G1 Charger Standard Package contains the following items:

Item	Charger	Power Adapter	User's Guide
Illustration			User's Manual


3. CHARGER APPEARANCE










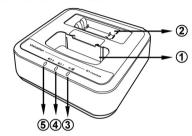

Introductions				
1	Pager Socket			
2	Spare Battery Socket			
3	ம்∕ 📓 G1 Pager Charging LED & Power on LED			
4	■ 1 Spare Battery 1 Charging LED			
<u>5</u>	2 Spare Battery 2 Charging LED			

➤ 3-2. REAR VIEW

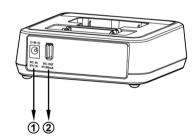

Output Introductions		
1	Power Socket	
2	Bluetooth Headset Jack	

➤ 3-3. LED INDICATOR

The G1 charger provides 3 LEDs to indicate the status of the charger.

Charger Status Indications				
LEDs	少/冒 G1 Charging LED	Spare Battery Charging LED	Spare Battery Charging LED	
Green Remains Flash	As ambient temperature is below 0°C or higher than 50°C	N/A	N/A	
Green Flash for 1 second (when the adaptor is plugged in the charger)	Standby (power on)	N/A	N/A	
Green Light (when G1 is connected to SU Charger)	Fully Charged	Fully Charged	Fully Charged	
Orange Light	Charging	Charging	Charging	
Flashing	Charging voltage is too high. Charging current is too high. Charging error. Exceed Charging hour.	Charging voltage is too high. Charging current is too high. Charging error. Exceed Charging hour.	Charging voltage is too high. Charging current is too high. Charging error. Exceed Charging hour.	
No light	No power	N/A	N/A	




4. FEATURE INTORDUCTION



G1 Single Unit Charger provides charging functionality to three devices with G1 Pager, AAA Spare Battery and external Bluetooth Headset.

➤ 4-1 INSTALLATION

Please make sure the AC power adaptor connects correctly to the charger before charging.

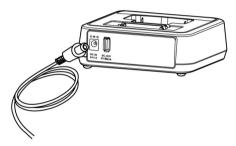

- Step 1. Connect the power cable to G1 charger Power socket.
- Step 2. Plug the AC transformer into a wall outlet.

 When the charger is powered properly, the power LED will turn

 Green for a few minutes and then extinguish.

NOTE: If the charger installation is correct, but the LED does not light, please contact your local dealer.

➤ 4-2. CHARGING

The G1 charger should be used to G1 pager only. Before charging the G1 pager, please make sure that the batteries inside the pager are rechargeable (Ni-MH) type battery.

(Recommendation: Please use the battery provided by Unication.)

- Step 1. Please insert the pager vertically into the charger's pager pocket as in the following illustration.
- Step 2. Once the pager is inserted correctly the charger will detect the battery and start charging.

When the pager is being charged, the charging LED will turn orange.



Step 3. When the pager is fully charged, the charging LED will turn green. NOTE: If the red LED is flashing remove the G1 from the charger, this is

an abnormal condition.

NOTE: The charging green LED will remain flashing if ambient temperature is below 0°C or higher than 50°C. Please remove the pager from the charger to stop charging.



➤ 4-3. CHARGING SPARE BATTERY


The Unication's G1 charger allows Ni-MH spare rechargeable batteries to be charged.

- Step 1. Put the rechargeable batteries into battery pocket as following illustration: (Recommendation: Please use the battery provided by Unication.)
- Step 2. Once the Ni- MH rechargeable batteries are inserted correctly, the charger will detect the battery and start charging. When the rechargeable batteries are being charged, the charging LED will turn orange.
- Step 3. When the rechargeable batteries are fully charged, the LED will turn green.
- Step 4. If the red LED is on remove the spare batteries from the charger, this is an abnormal condition.

➤ 4-4. CHARGING THE BLUETOOTH HEADSET

The Unication's G1 charger offers external Bluetooth headset charging functionality.

Step 1. Insert the Bluetooth charger cable to the Charger Bluetooth headset charging jack.

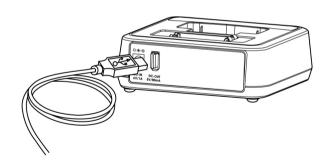

5. SPECIFICATIONS



Item	Specification
Adaptor Input Voltage	AC 100V ~ 240V @ 50 ~ 60Hz / Switching Type
Adaptor Input Rated Current	300mA RMS Max
Adaptor Output	DC 6V / 1A
Adaptor Efficiency	Min 73.41% (CEC V Compliant)
Pre-Charge Current	250mA
Normal Charge Current	800mA
Full Normal Recharging Hour	Approximately 3 Hours
Charging Current for G1 Pager	800mA @ 2.4V
Charging Current for 2 AAA Spare Batteries	800mA @ 1.2V
Charging Current for Bluetooth Headset	80mA @ 5V (Bluetooth Headset Power Supply)
Temperature Range	0°C to + 50°C
Dimensions	126mmx120mmx43.4mm





For more information, North America area, please contact us at : <u>sales@unication.com</u> . Other areas please contact us at : salesenquiry@uni.com.tw .

Corporate Headquarter: Unication Co., Ltd.

Tel.: +886-2-22999678
Address: 5F, No.6, Wu-Kung 5Rd.,
Diet. New Tainei City. 24890 Taiwan

Hsinchuang Dist., New Taipei City, 24890 Taiwan.

E-mail: salesenquiry@uni.com.tw

URL: www.uni.com.tw

North America Branch Office : Unication USA Inc..

Tel.: +817-303-9320
Address: 1901 E. Lamar Blvd.,
Arlington, TX 76006, U.S.A.
E-mail: sales@unication.com
URL: www.unication.com