



# Quick Guide

## G-Series DIGITAL VOICE PAGER

Dear Customer:  
Thank you for purchasing the G-Series DIGITAL VOICE PAGER.  
Please read the Quick Guide before operating the G-Series DIGITAL VOICE PAGER.

### 1. PAGER OVERVIEW

#### a. Pager Appearance

Front View

Side View

Rear View



Top View



#### b. Standard Accessories

▼ Belt Clip

▼ USB Cable



Lithium Polymer Battery Pack

NO.	Description
a-1	LED Indicator
a-2	Navigation Key
a-3	Soft Key (K1~K4)
a-4	Back Key (F2)
a-5	Main Menu (F1)
a-6	Speaker
a-7	Microphone
a-8	Receive Antenna
a-9	Channel Knob
a-10	Power on/off & Volume Knob
a-11	Play Key
a-12	Reset Key
a-13	Voice Memo Key (S1)
a-14	Micro USB Port
a-15	Belt Clip
a-16	Battery Cover


### 2. OPERATION INTRODUCTION

#### a. Initial Use

##### Install Battery

- 1 Turn the screws and remove the battery cover.
- 2 Insert the battery pack into the G-Series Pager.
- 3 Replace the battery cover and tighten the screws.

**Pressure Vent**  
Warning: Do not block. Warranty will be void if seal is broken.

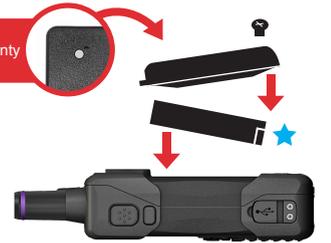

The edge by the ★ mark goes down.

##### Battery Charging

The G-Series Pager has its own customized Lithium Polymer battery, and it can be charged by a micro USB cable ( 5V / 2A ).



##### Power On

After the battery is installed, turn the volume knob clockwise to power on the G-Series Pager. You will hear a “click” sound and see the word “Loading” appear on the display screen.



#### b. LED Introduction




##### Power LED:

NO.	Product	Entity Key	Description
b-1	G4	Red Light	● Charging
b-2		Red Light	● Fully Charged
b-3	G5	Orange Light	● Charging
b-4		Green Light	● Fully Charged

##### Message LED:


NO.	Product	Entity Key	Description
b-5	G4	Green Light	● Receiving voice call or data call
b-6	G5	Green Light	● Receiving voice call or data call

### c. LCD Display

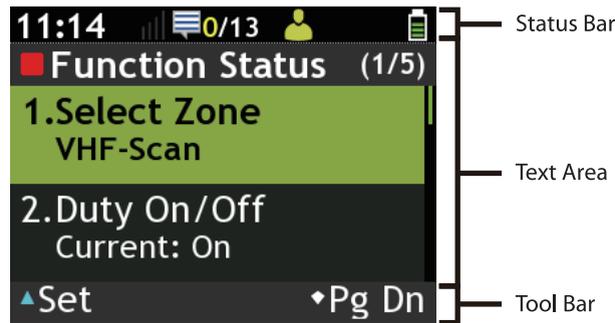

### Standby Screen

On the standby screen, the G-Series Pager displays information on the current receiving mode.

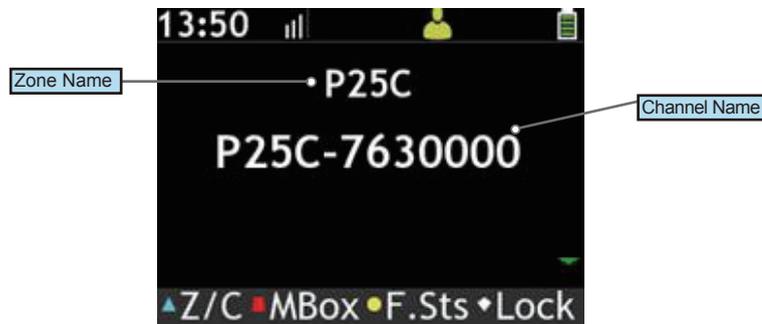

### Receive Message

The G-Series Pager displays the information of the incoming call when receiving a message.



### d. Icon Introduction

#### Status Bar Icon

NO.	Item	Icon	Description
d-1	Trunking Status		Trunking Status Indicator: Site Trunking
d-2	Trunking Status		Trunking Status Indicator (Blinking): Out Of Range
d-3	Trunking Status		Trunking Status Indicator: In Range
d-4	Trunking Status		Trunking Status Indicator (Blinking): Control Channel Hunting
			Trunking Status Indicator: Control Channel Scanned
d-5	Battery Status		The battery gauge indicator is located on the status bar and keeps you informed of the battery level. The six levels of indication are as follows: Empty Battery: <=1% 1 Red Cell: 2% 1 Green Cell: 3% ~ 25% 2 Green Cells: 26% ~ 50% 3 Green Cells: 51% ~ 75% 4 Green Cells: 76% ~ 100%
d-6	On Duty		On Duty Indicator
d-7	Off Duty		Off Duty Indicator
d-8	Time Display		Time Display(24 Hour Format) Time Display(12 Hour Format - AM) Time Display(12 Hour Format - PM)
d-9	Bluetooth		Bluetooth is activated
d-10	Bluetooth Headset		Bluetooth Earphone is connected
d-11	Message Hint		Unread Message Indicator
d-12	Alarm Clock		Alarm Clock is activated
d-13	RF Strength		RF Signal Strength Indicator

**G4/G5 BATTERY NOTICE:** Battery must be charged a minimum of 5 hours prior to usage.

**IMPORTANT G4/G5 INFORMATION:** For questions or help on your new G4/G5 device, you may reach our support team at (817) 3039320 [Press Option 1: "Digital P25 Support"](#)

*For more details, please refer to your G-Series user's manual.*

WE RESERVE THE RIGHT TO CHANGE TECHNICAL SPECIFICATIONS WITHOUT PRIOR NOTICE.



©2015 Unication Co., Ltd.  
The information contained in this document is the exclusive property of Unication Co., Ltd.  
It shall not be disclosed, distributed or reproduced in whole or in part without written permission of Unication Co., Ltd.

**Head Office**  
Unication Co., Ltd.  
Tel.: +886-2-2299-9678  
Address: 5F., No.6, Wu-Kung 5 Rd.,  
Hsinchuang District, New Taipei City, Taiwan  
Email: salesenquiry@uni.com.tw

**North America Branch Office**  
Unication USA Inc.  
Tel.: +1-817-303-9320  
Address: 1901 E. Lamar Blvd.,  
Arlington, TX 76006, U.S.A.  
Email: sales@unication.com